



**1** Cut sweep to length 1/16" less than distance between doorstops. Cut metal with hacksaw and vinyl with scissors. Crimp ends of flange to hold vinyl in place.

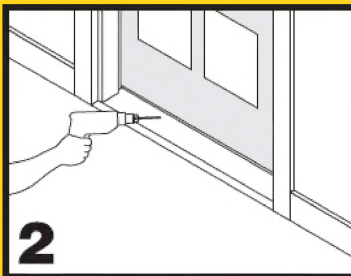

**2** Using small screws (included), install on the outside of the door with top edge of sweep 2-5/16" above the top of the threshold.

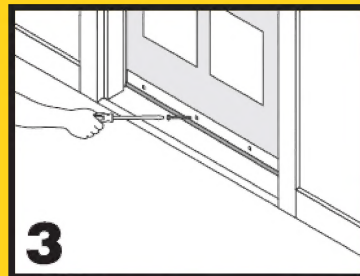

**3** Install nylon stop roller with large screw on the lock side of doorstop, 1-1/18" above the threshold. Roller should push door sweep down when the door is closed.

**1** Corte la barredora al largo, 1,6mm menos que la distancia entre los topes de la puerta. Corte el metal con una swqueta y el vinilo con tijeras. Apriete el extremo de la brida para retener el vinilo en posición.

**2** Usando los pequeños tornillos (incluidos) instale la barredora en el lado extenor de la puerta con el borde superior a 5,88cm sobre el sardinel.

**3** Instale el rodillo tope de nylon con un tornillo largo en el lado de la cerradura del tope de la puerta, a 2,86cm sobre el sardinel. El rodillo debe empujar la varredora hacia abajo cuando la puerta esté cerrada.